



BY PRO-JECT AUDIO SYSTEMS

INSTRUCTIONS FOR USE Pro-Ject Dock Box S Digital

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO docking station Dock Box.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.




Warning of a hazard for the user, the unit or possible misuse.



Important notice.

Connectors

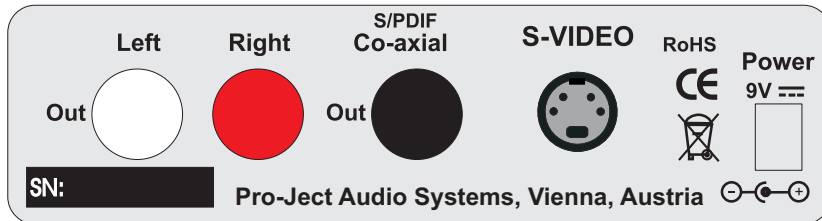

Make all connections whilst the Dock Box is disconnected from the power supply.



Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.

Never use any other power supply than the one supplied with the unit.

Connection to an integrate, pre, power amplifier or active speakers

Connect the **Left/Right Out** socket to a high level input on your integrated or pre amplifier, the pre input on your power amplifier or active speakers.



Connected to devices with a volume control, the volume level of the Dock Box has to be set to max.. Turn the Dock Box volume level to minimum before switching on your power amplifier or active speakers.

Connection to a external D/A-converter

Connect the **S/PDIF Co-axial out** socket to a coaxial digital input on the D/A converter or AV processor. Doing so allows you to use the signal in its digital for further digital processing.

Connection to a TV-set or a beamer

Connect the **S-VIDEO** socket to a s-video input of your TV-set or beamer.



„All digital“ units, such as iPhone 5®, do not support the s-video output.

Fitting and adjustment of the iPod®/iPhone® cradle

Use the knurled screw supplied to fix the cradle to the Dock Box chassis. Do not fully tighten the screw yet. Now place your iPod®/iPhone® on the Dock Box contacts. Move the cradle so that it supports the iPod®/iPhone® and tighten the screw.



This device is suitable for iPods®/iPhones® with 30-pole connector only.

To connect units with a lightning-connector, such as iPhone® 5 or iPod® Touch 5, a lightning-adapter (lightning connector → 30-pole connector) is needed.



Use without the cradle will eventually break the 30-pole connector of the Dock Box and the socket of the iPod®/iPhone®. Before connecting the iPod®/iPhone® any sort of cover has to be removed.

Mains power connection

Connect the low voltage plug from the power supply to the **Power 9V** socket before connecting the power supply to the mains.

To switch on and off, charging the battery

The push button on the front panel turns the Dock Box on and off. The blue LED above the push button shows that the unit is switched on.

When the dock is connected to the mains supply and switched on it will charge the docked iPod®/iPhone® (even in standby). Recharging is not possible, when the Dock Box is switched off.

Remote control



iPod® Touch and iPhone® must be unlocked and switched to music mode.
The volume control of the apple® device has to be set to max..



To switch on from standby or to standby



turns the iPod®/iPhone® into standby.
To switch on from standby press any key (except ON/OFF).

Volume control



and



adjust the sound volume

Mute (not supported by all iPods®)



activates and deactivates mute

Start / Pause



starts and pauses playback



„All digital“ units, such as iPhone 5®, do not support volume control.

Stepping between tracks, reverse and forward scanning



skips to the previous track.



skips to the next track



restarts the current track in playback mode



Press and hold the

button for reverse scanning, or the button



to start forward scanning.

Repeat play



starts repeat play for the current track. Pressing the button again starts repeat play for all tracks.
To deactivate repeat play press REPEAT once more.

Shuffle play



activates and deactivates shuffle play

Navigating the menu



shows the menu. Returns to the previous step in the menu



and move the cursor up and down, to highlight the requested option.



selects or deselects the highlighted option. Shows the next step in the menu.

Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Technical specifications Pro-Ject Dock Box S Digital

Frequency response:	20Hz - 20kHz
Line-level output:	1 pair RCA/phono sockets
Output impedance:	15 ohms
Output voltage:	max. 0,775Vrms
Volume control and mute:	min. level -68dB
Digital output:	co-axial (S/PDIF)
D/A-converter:	Cirrus Logic CS4344. 24Bit/192kHz
Video output:	S-video socket
Outboard power supply:	9V/2A DC, suitable for your country's mains supply
Power consumption:	800mA DC max.. Power consumption is not constant. It depends on the charging needs of the battery. <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 36 x 104 (109)mm - height plus height of iPod®/iPhone®
Weight:	585g without power supply

Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

Safety instructions



AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply.

The power supply is used to disconnect the unit from the mains. Make sure that the power supply is easily accessible at all times. Never handle the device, the power supply while your hands are wet or damp.

Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply.

Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

Copyright, trademarks

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH
Copyright © 2011. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

iPod® and iPhone® are trademarks of Apple Inc., registered in the U.S. and other countries.